


# CENTER POWER OUTLET SOCKET

## COMPONENTS

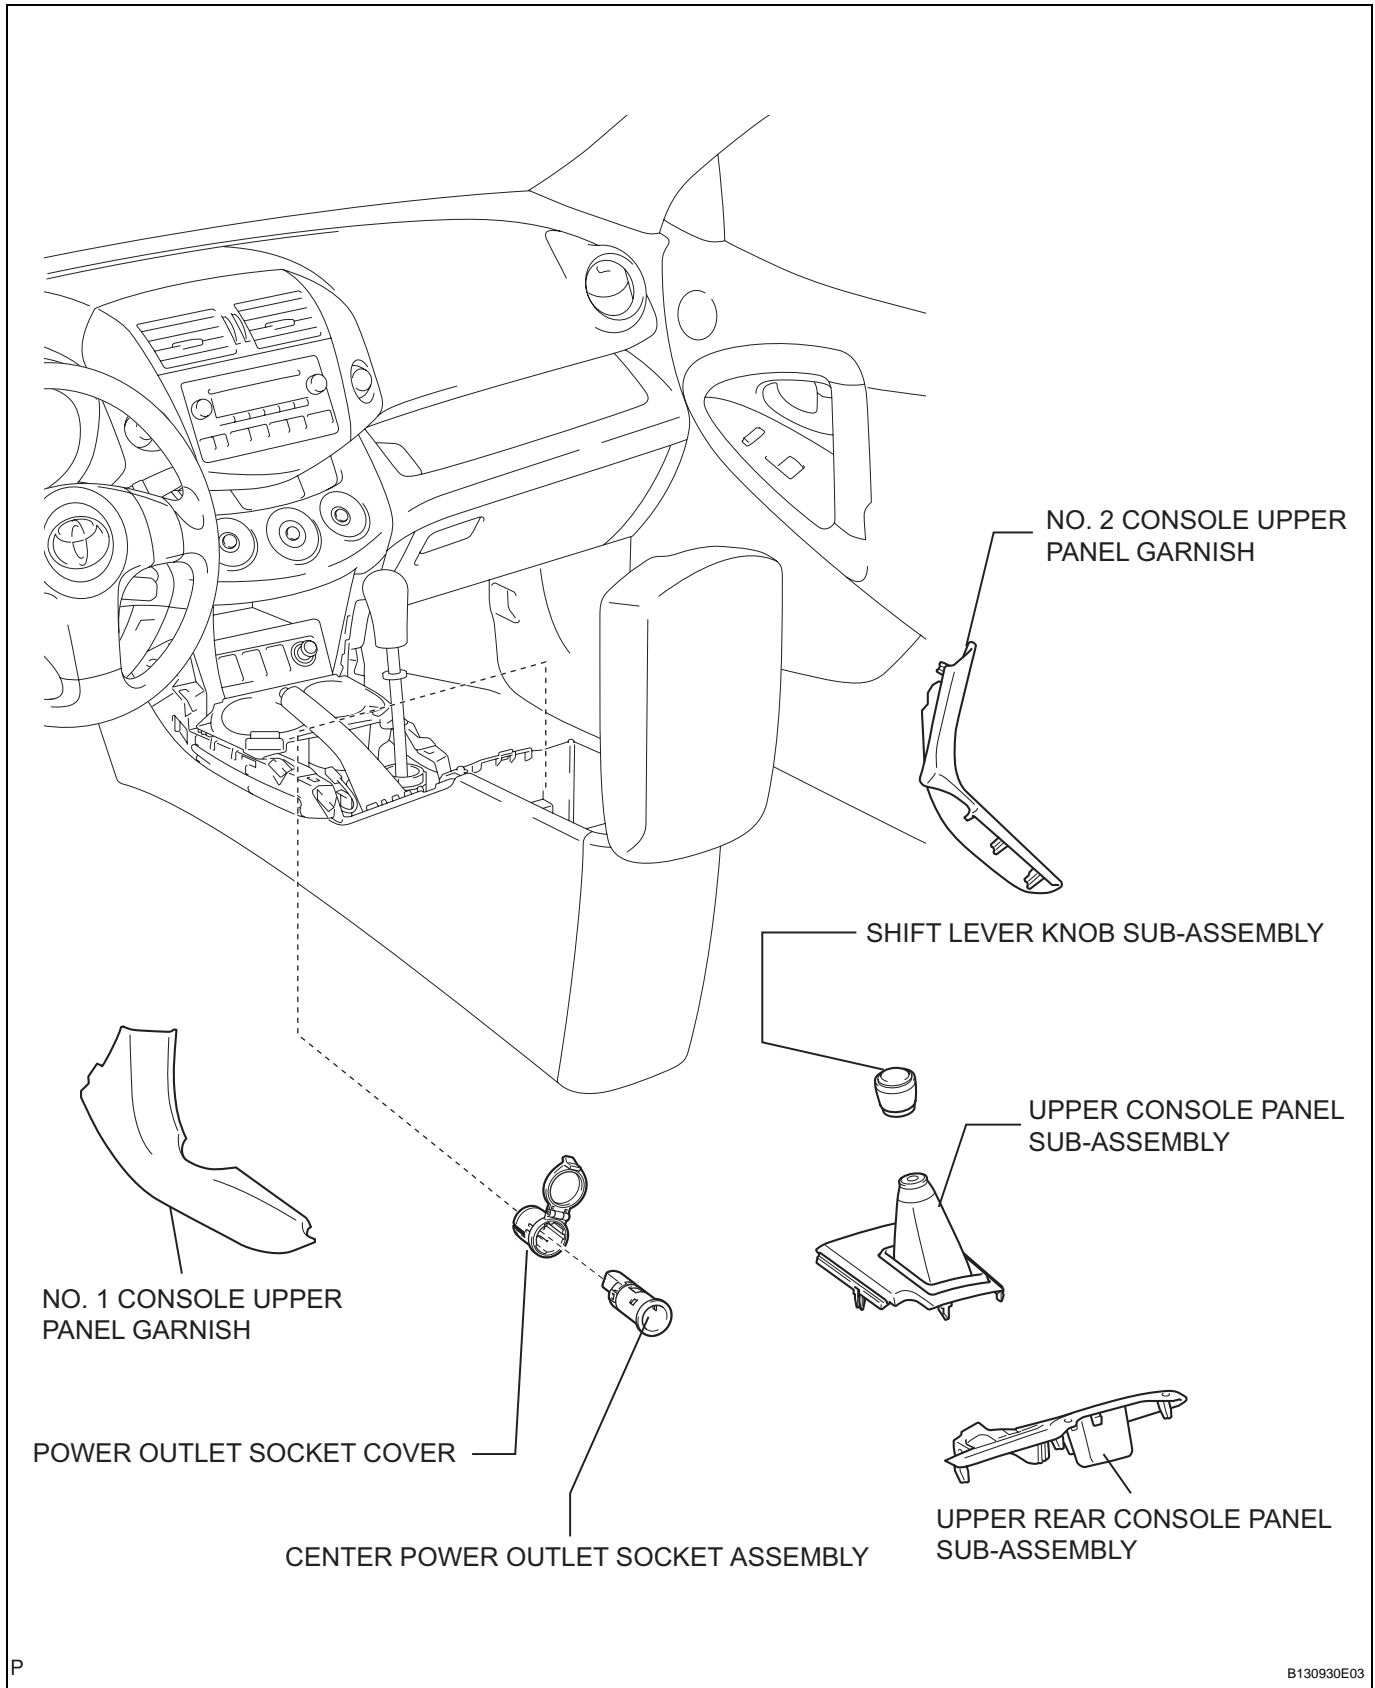

## REMOVAL


1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

### CAUTION:


Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.


2. REMOVE NO. 1 CONSOLE UPPER PANEL GARNISH (See page [IP-17](#))
3. REMOVE NO. 2 CONSOLE UPPER PANEL GARNISH (See page [IP-18](#))
4. REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY
5. REMOVE UPPER CONSOLE PANEL SUB-ASSEMBLY (See page [IP-18](#))
6. REMOVE UPPER REAR CONSOLE PANEL SUB-ASSEMBLY (See page [IP-19](#))
7. REMOVE CENTER POWER OUTLET SOCKET ASSEMBLY

(a) Rotate the socket to disengage the notch.

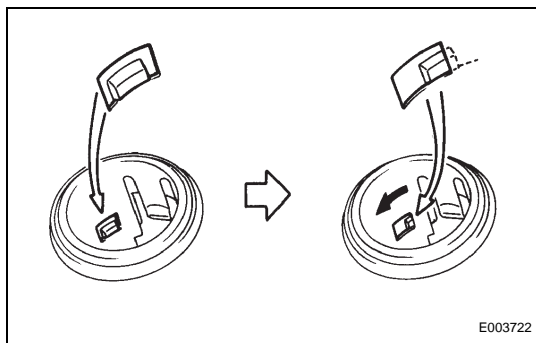

- (b) Pull out the socket halfway and rotate the socket until its protrusion is aligned with the groove of the cover.
- (c) Remove the socket from the cover.

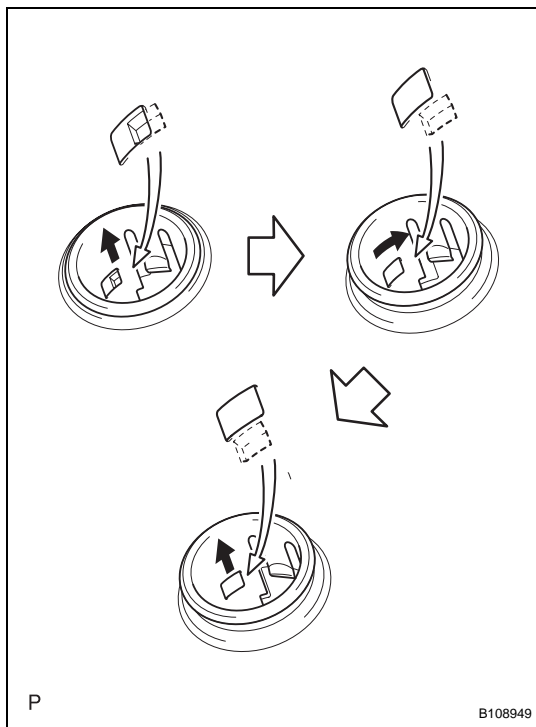

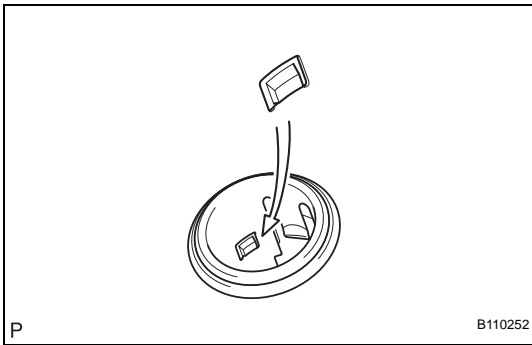

## INSTALLATION

### 1. INSTALL CENTER POWER OUTLET SOCKET ASSEMBLY

- (a) Align the protrusion on the backside of the socket with the groove of the cover. Then push the socket into the cover.

### 2. INSTALL UPPER REAR CONSOLE PANEL SUB-ASSEMBLY (See page [IP-27](#))

### 3. INSTALL UPPER CONSOLE PANEL SUB-ASSEMBLY (See page [IP-27](#))

### 4. INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY


### 5. INSTALL NO. 2 CONSOLE UPPER PANEL GARNISH (See page [IP-28](#))

### 6. INSTALL NO. 1 CONSOLE UPPER PANEL GARNISH (See page [IP-28](#))

### 7. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

# CENTER POWER OUTLET SOCKET (for AC Power Supply)

## COMPONENTS

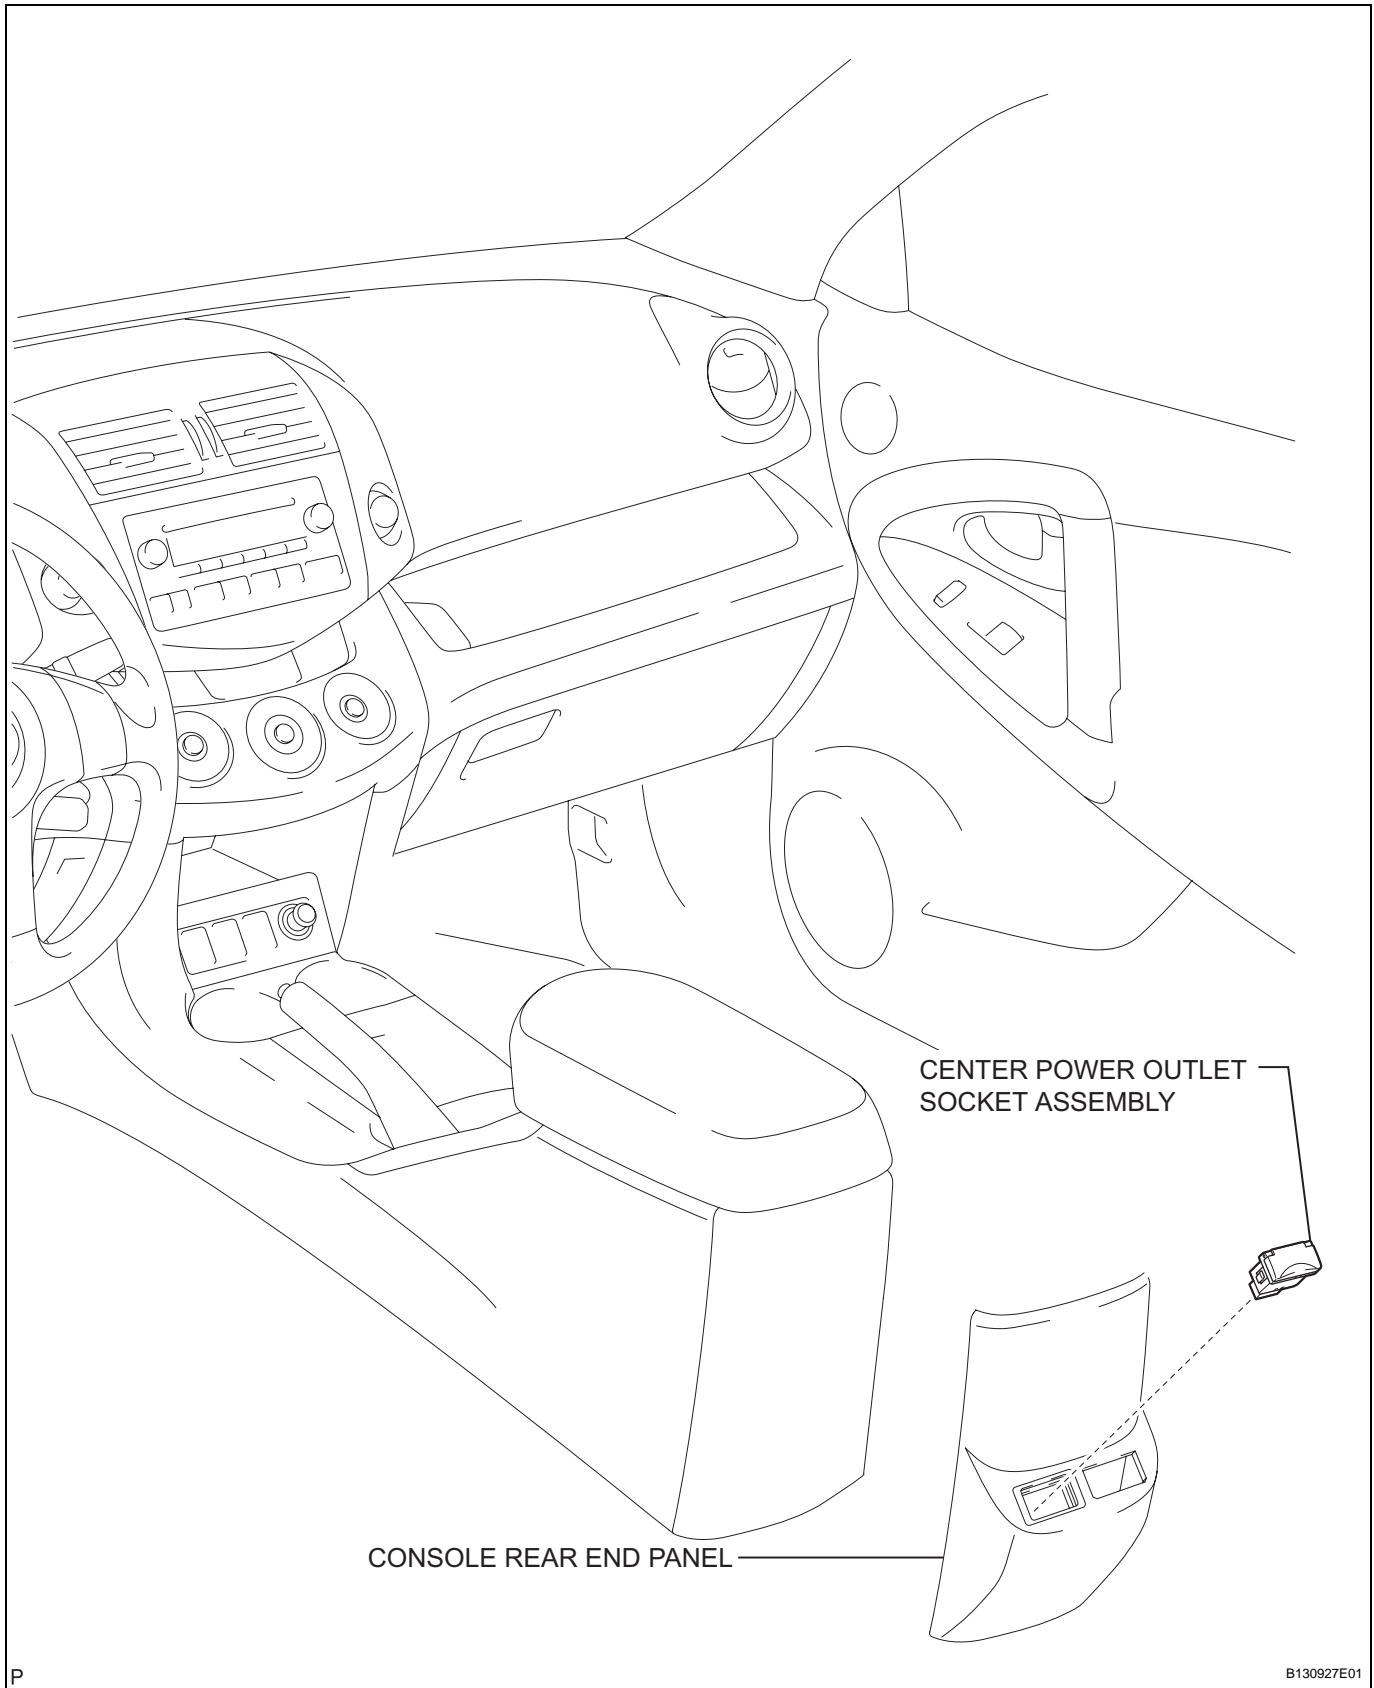

## REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**



**CAUTION:**

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE CONSOLE REAR END PANEL** (See page [IP-19](#))

3. **REMOVE CENTER POWER OUTLET SOCKET ASSEMBLY**

- (a) Disconnect the connector.
- (b) Detach the 2 claws and remove the power outlet.

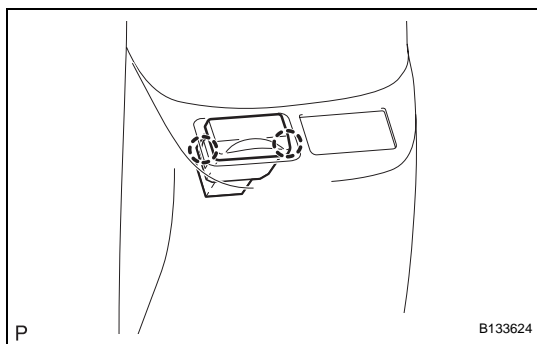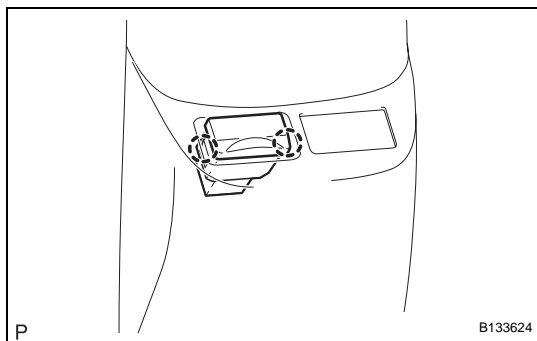

## INSTALLATION

1. **INSTALL CENTER POWER OUTLET SOCKET ASSEMBLY**

- (a) Attach the 2 claws to install the voltage inverter.
- (b) Connect the connector.

2. **INSTALL CONSOLE REAR END PANEL** (See page [IP-27](#))

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**